



Digital Plunger Installation



1. Mount ball shooter in cabinet




2. Push slide to front of unit



3. Place finger slightly into opening




4. Slide retaining clamp over backend of plunger

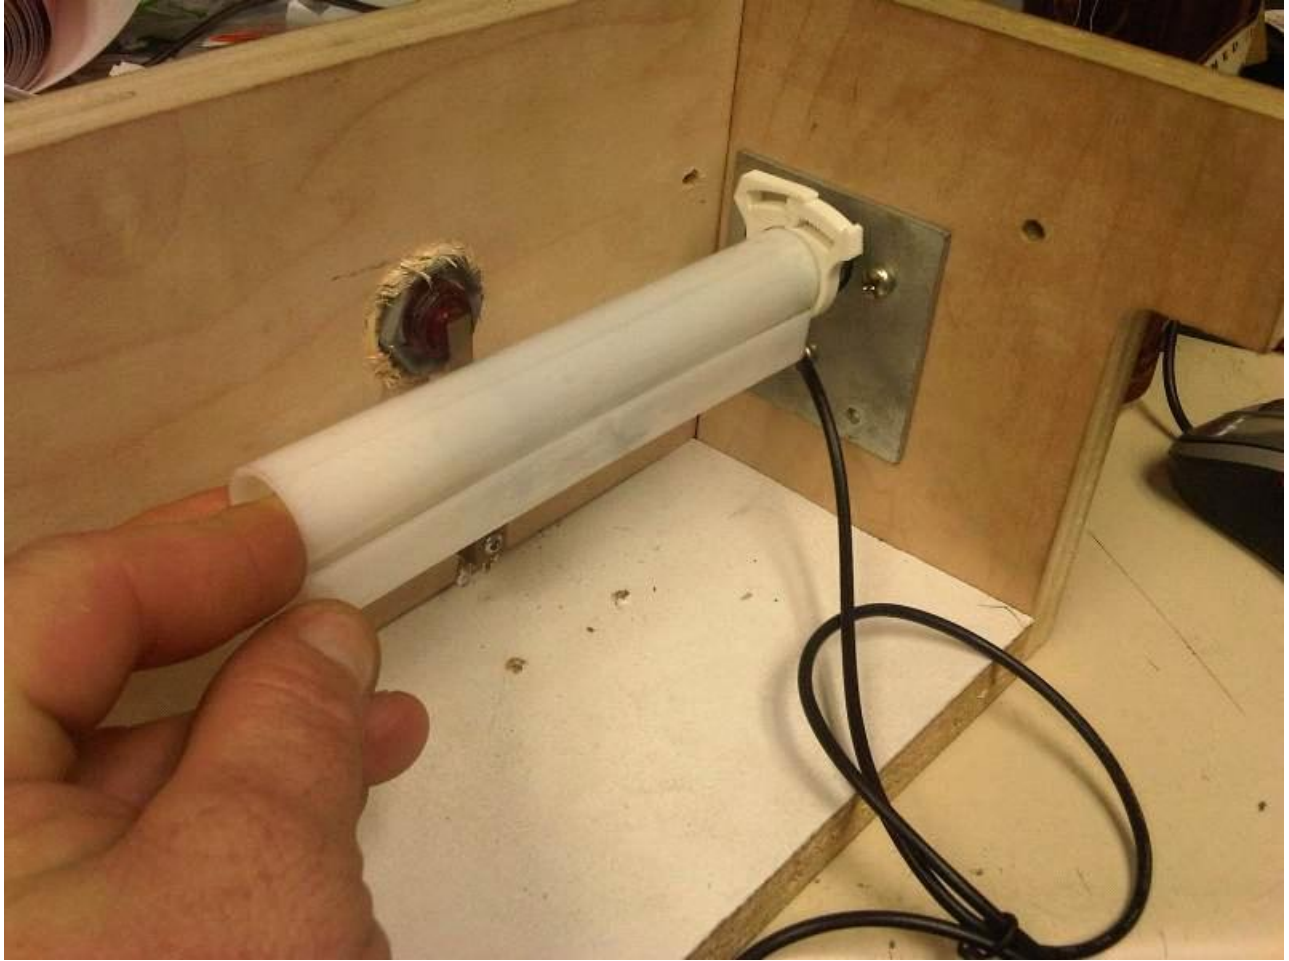

5. Push plunger firmly onto ball shooter assembly until slide is seated against pin



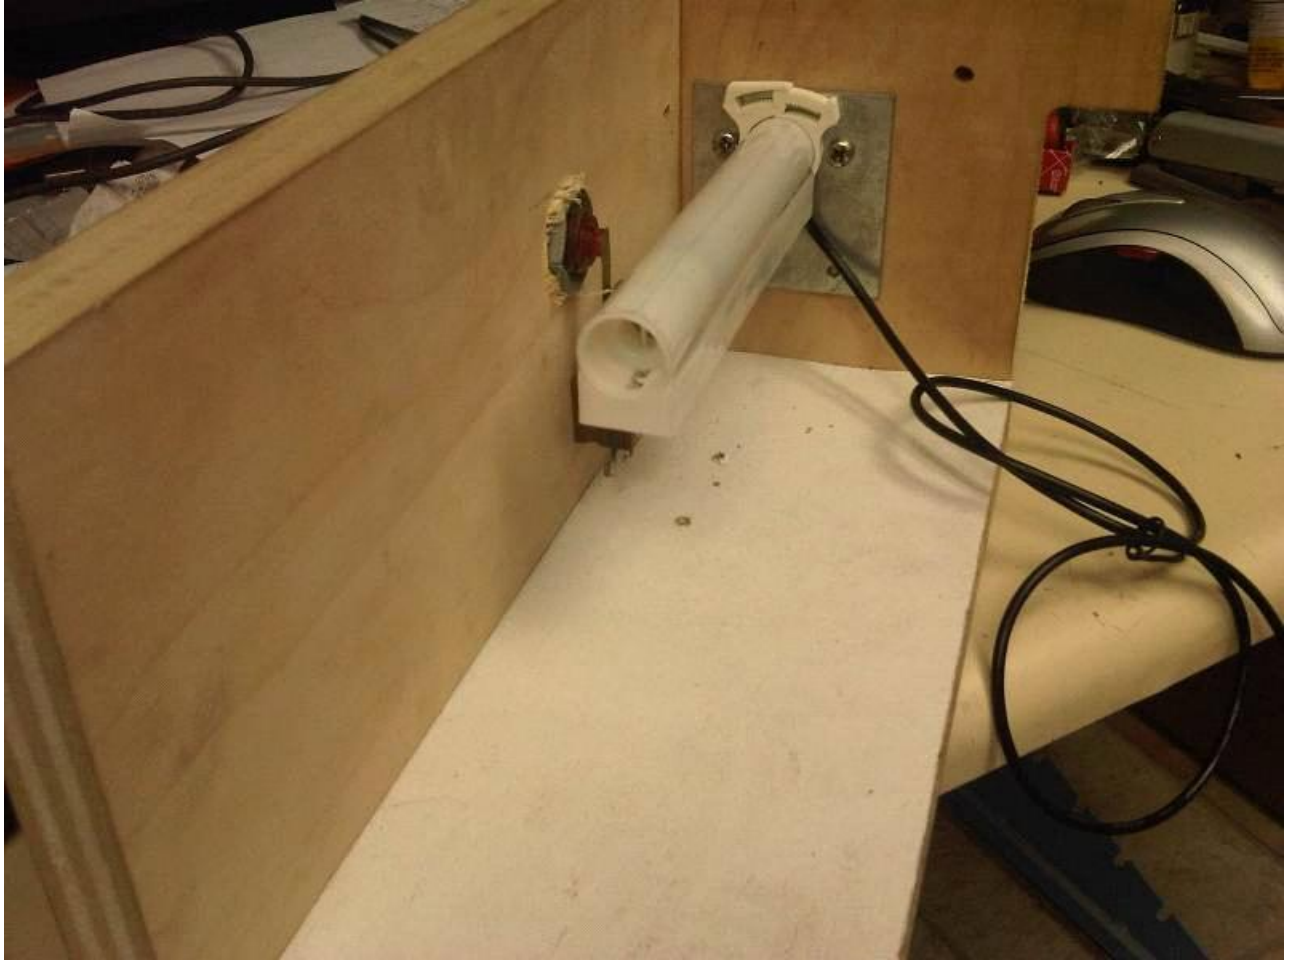

6. Ensure plunger is fully seated against cabinet





7. Gently but firmly squeeze clamp until completely closed








8. Take USB "B" connector and insert completely into nudge unit





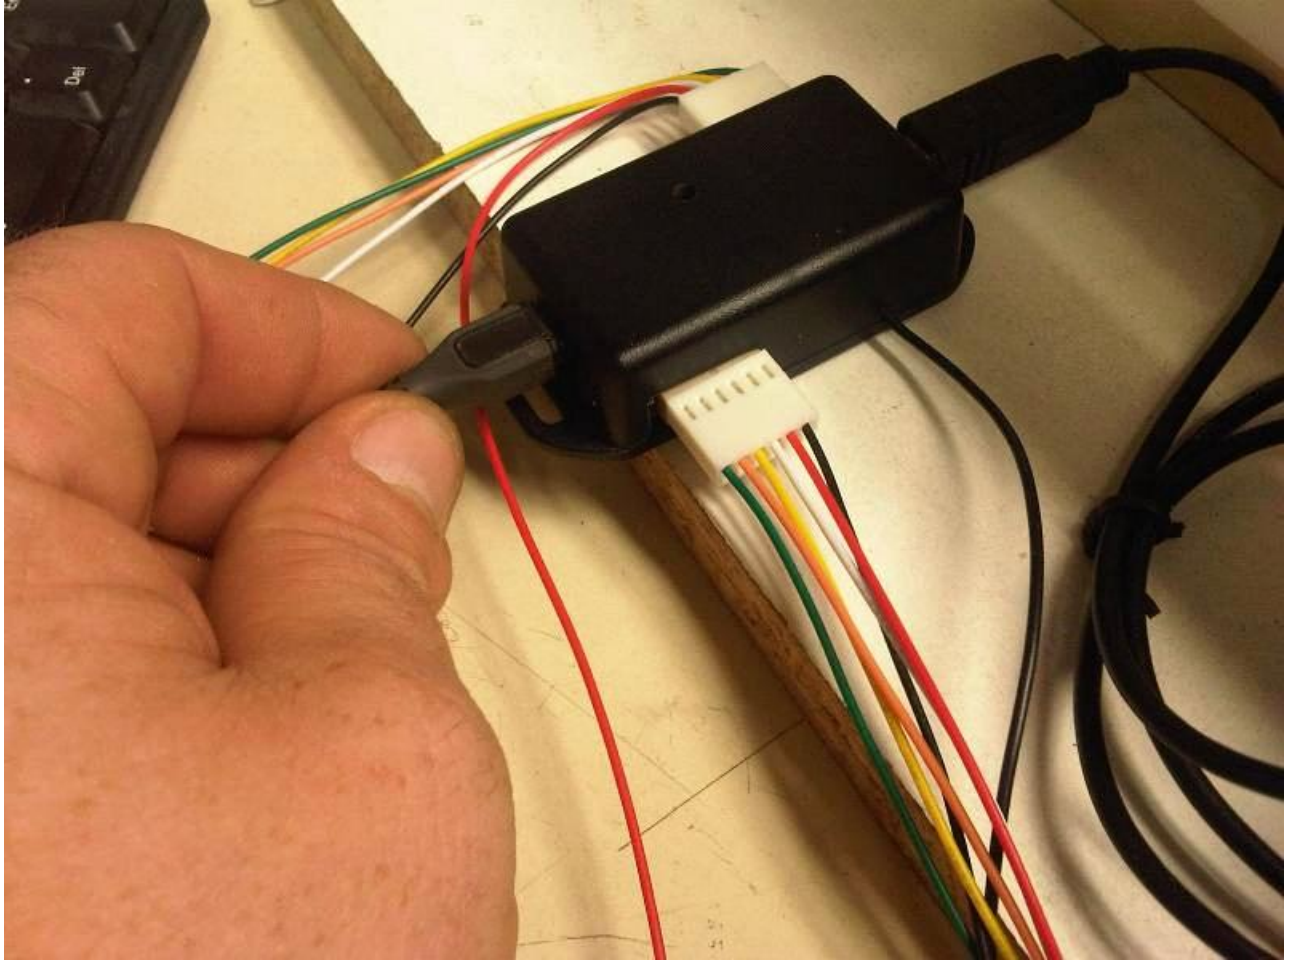

9. Insert mini "B" cable into sensor unit



10. Center sensor and mount to bottom of cabinet oriented as above.